


FEATHER DANCER™ FLAGS

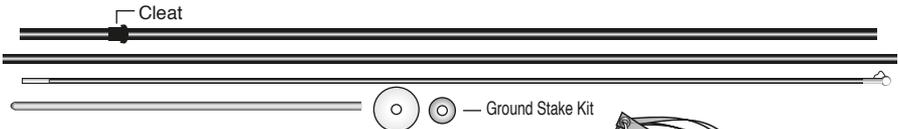

ASSEMBLY INSTRUCTIONS


Before assembling your Feather Dancer™ flag pole kit, hammer the included fiberglass ground stake into the ground where you desire to fly your Feather Dancer™ flag, leaving approximately 1/2 of the ground stake exposed to support the assembled flag pole. Slide the CoroShield & metal washer over the ground stake. *TO PREVENT DAMAGE TO THE GROUND STAKE, USE A WOOD BLOCK BETWEEN THE GROUND STAKE AND YOUR HAMMER. USE GLOVES OR HANDCLOTH WHEN HANDLING, INSTALLING OR REMOVING FIBERGLASS GROUND STAKE.*

WARNING: WHEN INSTALLING THE GROUND STAKE, EXERCISE CAUTION, AVOIDING ALL ELECTRIC, WATER, AND GAS LINES! ALSO, WHEN ERECTING THE FLAG, WATCH FOR OVERHEAD POWER LINES.

TO ASSEMBLE FLAG POLE HARDWARE:

1. Remove the flag pole sections from the plastic bag. (The 13' flag pole has three sections, and the 17' flag pole has four sections.) The bottom section has a tension clip, and the top section has a chrome ball at one end.
2. Take the middle section and insert the rubber-tipped end into the top of the bottom pole section. (The 17' pole will have two tapered middle sections.)
3. Insert the white end of the top section into the top of the middle pole section.
4. Unfurl your Feather Dancer™ flag and attach metallic streamers using the enclosed zip tie. (Do not tighten zip tie too tightly—allow room for streamer to move.) Trim excess from the zip tie with knife or scissors. Insert the top (ball end) of the assembled pole into the bottom open end of the Feather flag sleeve.
5. After sliding the flag pole the full length of the flag sleeve, thread the enclosed elastic cord through the bottom grommet in the flag sleeve and pull the looped end down and hook it onto the cleat (see inset).

6. Slide pole over the installed ground stake. Your Feather Dancer™ is now fully installed.

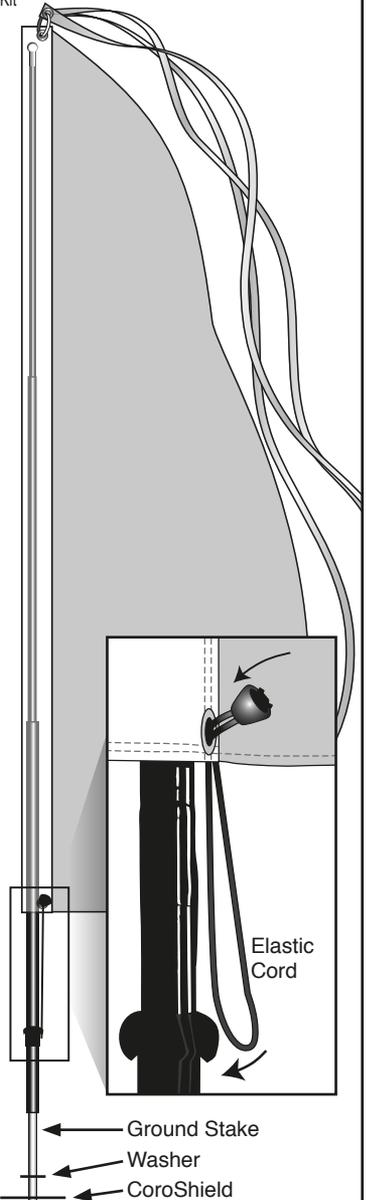

IMPORTANT:

Use gloves when working with fiberglass ground stake.