

## **HOW TO APPLY & REMOVE SEG GRAPHICS**

## **INSTALL INSTRUCTIONS**


Push the silicone edge into each corner of the frame (1-4) with your thumb. From each corner, you can push about 4-5" of silicone edge into the frame.

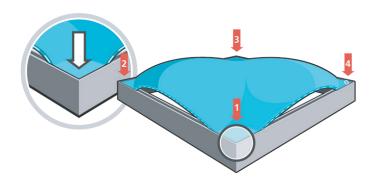

Push the silicone edge into the middle of the frame edges and work your way towards each corner until all beading is pushed in properly. Each edge should fit flush and without wrinkles.

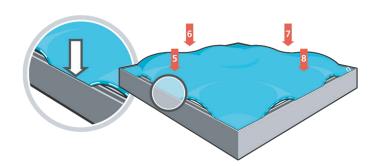

Go around the frame again in order to check that all silicone has been pushed completely into the channel.

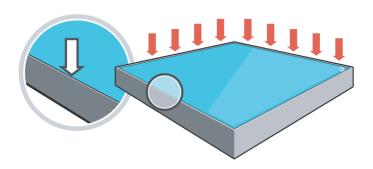

## **REMOVAL:**

To remove the graphic, simply pull the small tab in the bottom corner of the graphic to lift the silicone edge out of the extrusion.

